

927 - Diamond Stat™ Grande™

Diamond Stat Grande matting is a full one-inch thick. This conductive/anti-static mat designed to provide a continuous path to ground. The mat drains static electricity from the worker keeping sensitive circuitry from being damaged.

The top surface is electrically-conductive PVC and combined with an ergonomic rubber foam base utilizing NoTrax® exclusive UniFusion™ technology. This virtually eliminates the possibility of de-lamination.

- Electrically-conductive, heavy-duty PVC diamond plate top surface provides superior durability and traction for sure footing
- Ergonomic fatigue-reducing rubber foam base provides comfort and support through superior rebound
- Rubber foam base provides high friction to reduce mat movement
- UniFusion™ bond guaranteed for the life of the mat
- Beveled edges on all 4 sides
- Certified by the NFSI (National Floor Safety Institute)
- RG $10^4 - 10^6 \Omega$; RP $10^4 - 10^6 \Omega$ tested to ANSI/ESD-S7.1 2001
- Grounding cord included, required




Specifications

Stock Sizes	2 x 3 ft, 3 x 5 ft, 3 x 12 ft
Roll Sizes	2 x 75 ft, 3 x 75 ft, 4 x 75 ft
Thickness	1"
Cut Lengths	2, 3, and 4 ft widths (up to 75 ft long)
Colors	 Black

Performance:

	Good	Better	Best	Superior
Wear Resistance				
Anti-fatigue Performance				
Slip Resistance				

WARNING: This product can expose you to chemicals including di-2-ethylhexyl phthalate and/or diisononyl phthalate which is known to the State of California to cause cancer, birth defects or reproductive harm. For more information, visit www.P65Warnings.ca.gov

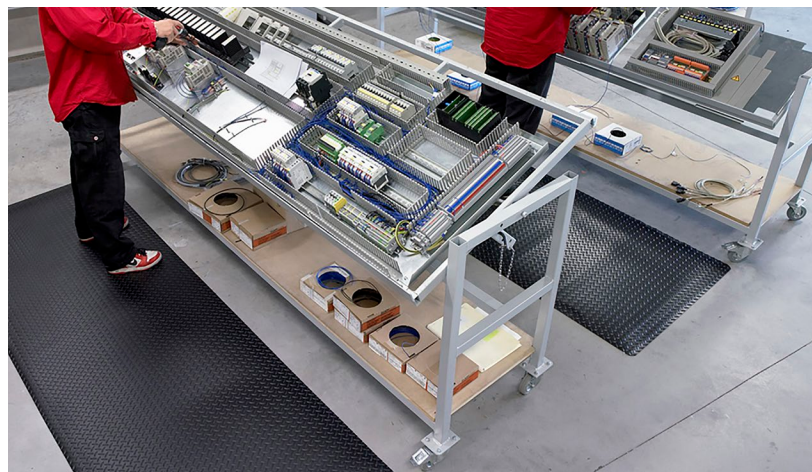

Applications

- Assembly Lines
- Testing Areas
- Electronic Areas
- Workstations



NoTrax

5655 West 73rd Street
Chicago, IL 60638

Phone: (800) 621-2802

Fax: (720) 890-4858

Email: customerservice@notrax.com

NoTrax.com