


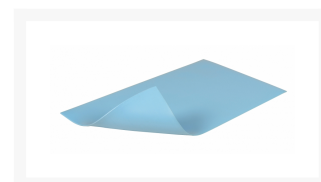


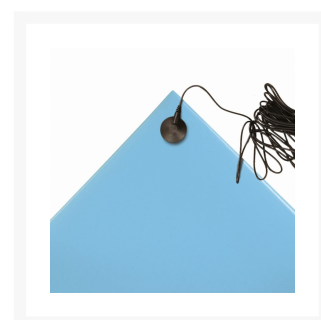

Anti Static Mat Anti-Stat P.O.P.™ 827

Product Images

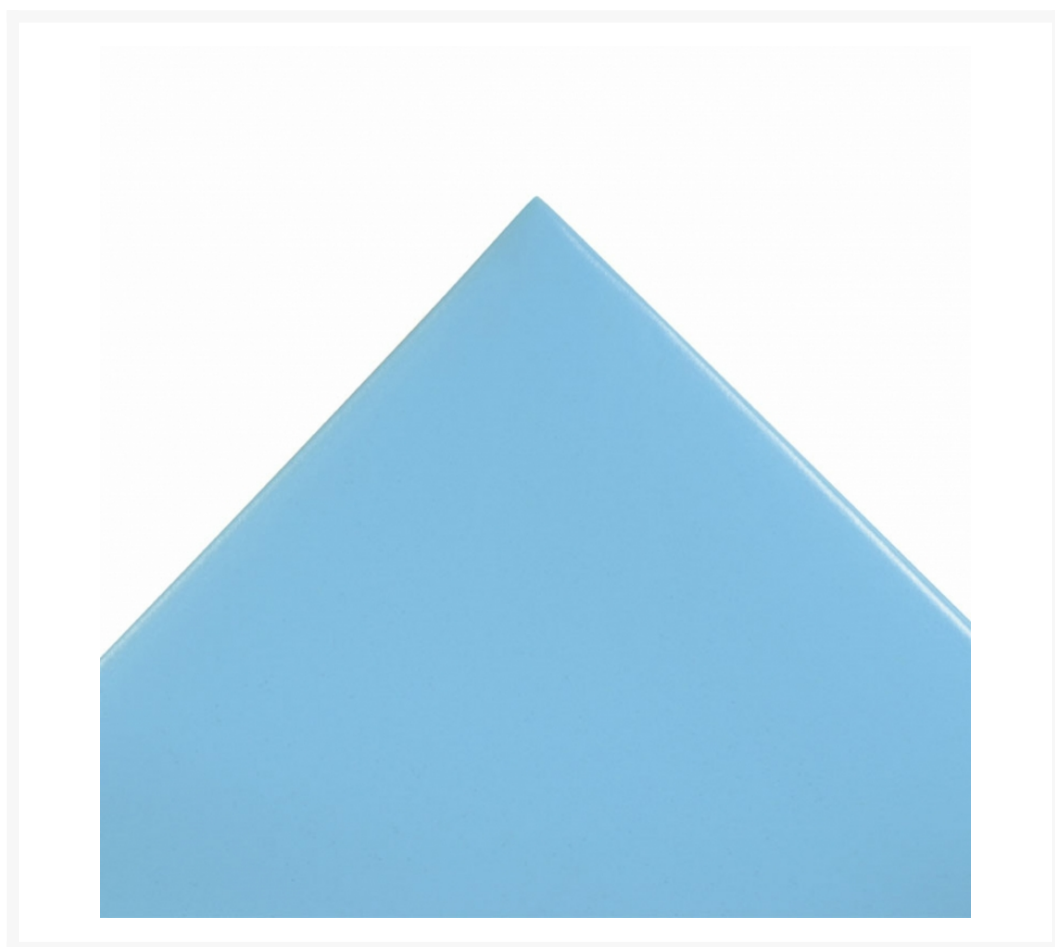

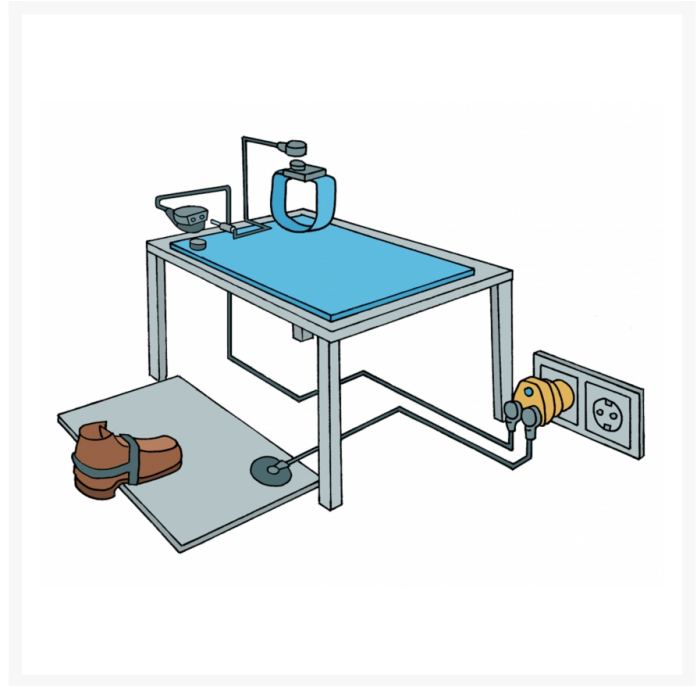

Short Description

- Static dissipative vinyl work surface that dissipates static from conductive items placed on it
- Protects table and keeps sensitive components safe from damaging static shocks
- Single layer, smooth top surface that is abrasion resistant and easy to wipe clean
- Meets or exceeds requirements of ANSI/ESD S20.20 and per ANSI/ESD STM4.1
- Resistance Point to Ground (Rtg): 10^7 ohms
Resistance Point to Point (Rtt): 10^8 ohms
- 051 Grounding cord available, not required

Description

Specialized line of ESD Anti-Stat P.O.P.™ to ensure a static free workplace and protect employees and sensitive electrical equipment. Use Anti-Stat P.O.P.™ to connect table work surface, employees and conductive material to a common grounding point. This creates a balance between all items and personnel to ensure static electricity will flow to ground in a controlled manner. For use in ESD working zones to protect electrostatic sensitive components.

Static dissipative vinyl work surface that static load from conductive items placed on it. Protects table and keeps sensitive components safe from damaging static shocks. Smooth top surface that is abrasion resistant and easy to wipe clean. Optional grounding cord. Microcellular vinyl foam treated with dissipative static properties.

Specifications

Model No	827
Brand	NoTrax
Available Colors	Blue
Cut to Length Width	3 feet x Specify Length, 2 feet x Specify Length, 2.5 x Specify Length
Thickness	1/4 inch
stock size test	2.5 feet x 40 feet, 3 feet x 40 feet
Overall Thickness	1/4
Custom Lengths	2', 30" and 3' widths (up to 60' long)
Group	Ergonomic, Anti-fatigue & Safety Matting
Environment	Dry Areas
Special Characteristics	Free of DOP, free of DMF, free of ozone depleting substances, free of silicone and free of heavy metals
Recommended Use	For use in ESD working zones to protect electrostatic sensitive components
Special Remarks	Anti-Static table top single layer work surface
Edges	Beveled edges on all sides
Usage Intensity	Medium duty
Roll Lengths	3 feet x 40 feet, 2.5 feet x 40 feet
Custom Description	Available in rolls sizes and in custom lengths. Available in blue.
Material Specifications	Closed Cell Polyvinylchloride
Surface Detail	Smooth Even Surface
Process	Foaming
Weight Lbs/sqft	0.63
Fire Rating US	Pass
REACH Compliant	Reach compliant (Registration, Evaluation, Authorization and Restriction of Chemicals).

Product Options

Dimensions:	2.5ft x 40ft
	2.5ft x Specify Length
	2ft x Specify Length
	3ft x 40ft
	3ft x Specify Length