

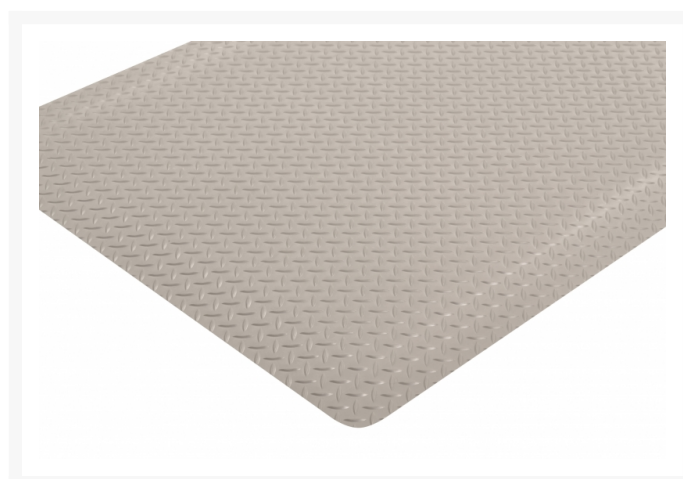
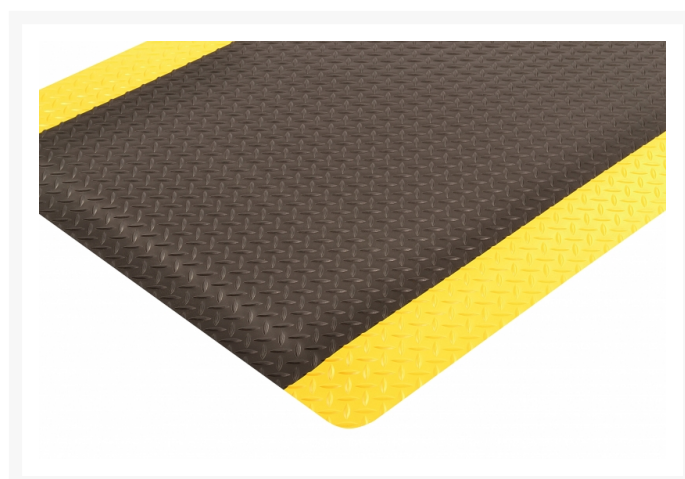
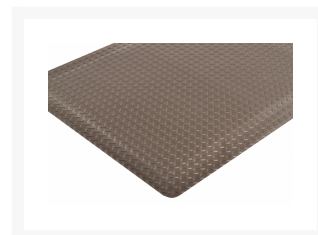


Anti-Fatigue Mat Saddle Trax® 979

Product Images

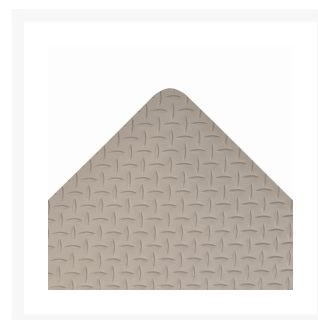

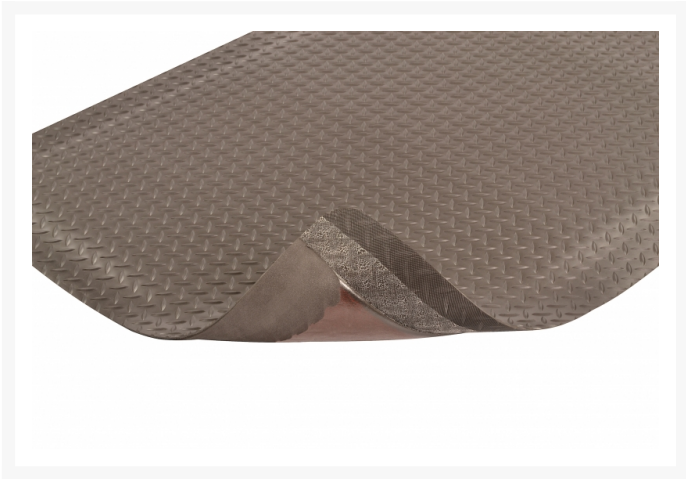

Short Description

- Long-lasting vinyl top surface made from 100% recycled materials is combined with a dense closed cell PVC foam base
- Diamond-plate surface texture provides added traction
- UniFusion™ bond guaranteed for the life of the mat
- Redstop™ non-slip backing to reduce mat slippage
- Beveled edges on all 4 sides
- Certified by the NFSI (National Floor Safety Institute)

Description

Saddle Trax® is a thicker, heavier and stronger anti-fatigue floor mat. Engineered to meet the toughest requirements of today's industrial applications and is particularly suited for multi-shift operations in dry work areas where the worker is standing for prolonged periods of time; workstations, assembly lines. At a full ONE-INCH thick, it is the ultimate anti-fatigue product maximizing worker productivity and comfort. The heavy-duty vinyl diamond-plate design provides non-directional traction, and is easy to clean. The top surface is combined with a dense closed cell foam base utilizing NoTrax® exclusive UniFusion™ technology. This virtually eliminates the possibility of de-lamination. NoTrax® laminate floor mats that come with RedStop™, a uniquely engineered non-slip backing technology, eliminates the slipping and sliding of floor mats on smooth surface flooring such as tile, wood, marble, and treated concrete. The sloped beveled edges reduce tripping hazards and allow easy access on and off the mat.

Specifications

Model No	979
Brand	NoTrax
Available Colors	Black; Gray; Multi
Cut to Length Width	4 feet x Specify Length, 3 feet x Specify Length, 5 feet x Specify Length, 2 feet x Specify Length
Thickness	1 inch
Surface	Textured
stock size test	2 feet x 3 feet, 3 feet x 12 feet, 3 feet x 5 feet
Overall Thickness	1
Custom Lengths	2', 3', 4' and 5' widths (up to 75' long)
Group	Ergonomic, Anti-fatigue & Safety Matting
Environment	Dry Areas
Special Characteristics	NSFI certified. Free of DMF, free of ozone depleting substances, free of silicone and free of heavy metals
Recommended Use	In manufacturing plants, assembly lines, picking, packing and logistics warehouses, individual workstations. Also suitable for commercial environments including hotels, reception desks, shop counters, department stores, banks, restaurants, etc.
Special Remarks	Use in toughest industrial environments where worker fatigue prevention is most critical. Ideal for multi-shift environments. Full 1" thick version for applications that require additional comfort.
Edges	Beveled edges on all sides
Usage Intensity	Heavy duty
Roll Lengths	3 feet x 75 feet, 4 feet x 75 feet, 5 feet x 75 feet, 2 feet x 75 feet
Installation	No installation required
Material Specifications	PVC
Surface Detail	Industrial Diamond Plate
Mat Type	Roll, Runner, Cut to Length

Backing	Closed Cell Polyvinylchloride with RedStop™ slip-resistant backing
Process	Lamination
Weight Lbs/sqft	1.6
Fire Rating US	Pass
Anti-Fatigue Rating	Superior
Slip Resistance Rating	Superior
Wear Resistance Rating	Superior

Prop 65

⚠️WARNING:This product can expose you to chemicals including di-2-ethylhexyl phthalate and/or diisononyl phthalate which is known to the State of California to cause cancer, birth defects or reproductive harm. For more information, visit www.P65Warnings.ca.gov.

Product Options

Color:	Black
	Black/Yellow
	Gray
Dimensions:	2ft x 3ft
	2ft x 75ft
	2ft x Specify Length
	3ft x 12ft
	3ft x 5ft
	3ft x 75ft
	3ft x Specify Length
	4ft x 75ft
	4ft x Specify Length
	5ft x 75ft
	5ft x Specify Length