


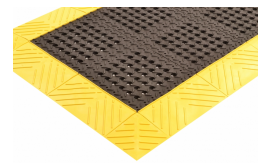


Interlocking Drainage Mat Diamond Flex-Lok™ 620

Product Images

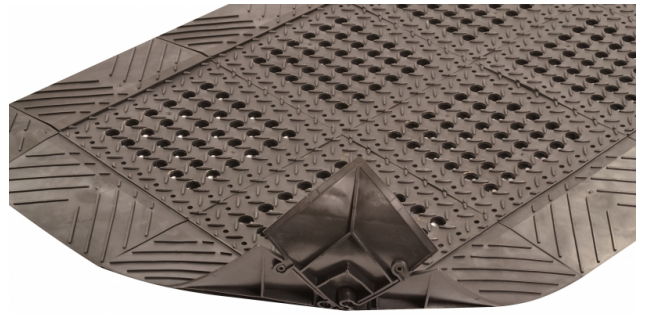

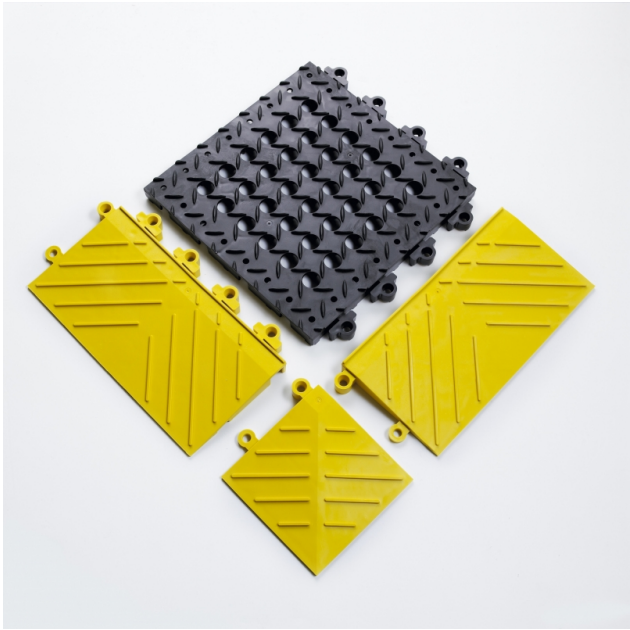

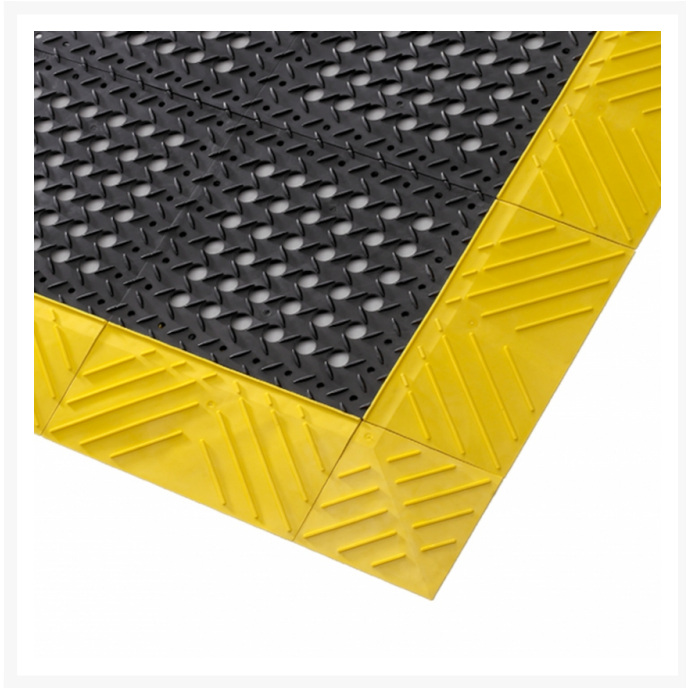

Short Description

- PVC drainage modular interlocking tile with raised diamond top surface for traction and greater resistance to industrial chemicals
- Ergonomic, multi-tiered design allows liquid to continuously flow underneath the mat and allows the underside to breathe. Elevates the mat from the floor.
- Spring-back design, engineered to cushion the impact of long-term standing. Allows the mat to flex with the weight of the worker.
- Black tiles & ramps made from 100% recycled PVC
- Highly resistant to industrial chemicals
- Stock size mats have beveled edges permanently affixed on 3 sides
- Accessories: 12x12" Tile (black only) 6x12" Ramps 6x6" Corners

Description

Diamond Flex-Lok™ is a high-performance modular matting system that combines the durability and toughness of an industrial mat with true ergonomic support and comfort. The ergonomic properties of Diamond Flex-Lok™ are the result of a multi-tiered footing design that elevates the mat off the floor, creating air pockets that allow the mat to flex with the weight of the worker. A large hole drainage system facilitates the removal of liquids and debris from the work area while a pronounced raised diamond pattern on the mat surface, and an inverted-V pattern on the ramps provide additional traction. Diamond Flex-Lok™ is manufactured from 100% recycled PVC for greater resistance to industrial chemicals, cutting fluids, oils and greases. A unique interlock system that comes apart only when you want it to allows for easy reconfiguration. Create your own workstation configuration or select an assembled stock size.

Specifications

Model No	620
Brand	NoTrax
Available Colors	Black; Yellow
Thickness	1 inch
stock size test	30 inch x 36 inch, 30 inch x 48 inch, 30 inch x 60 inch, 30 inch x 72 inch, 30 inch x 96 inch, 42 inch x 120 inch, 42 inch x 72 inch, 42 inch x 96 inch
Overall Thickness	1
Group	Ergonomic, Anti-fatigue & Safety Matting
Environment	Wet/Dry and Oily Areas
Special Characteristics	Available yellow borders along sides comply with OSHA code 1910-144 Free of DOP, free of DMF, free of ozone depleting substances, free of silicone and free of heavy metals
Recommended Use	In manufacturing plants, production lines, assembly lines, CNC machines, metal working, fabrication
Special Remarks	Factory-assembled custom configurations available - Call Customer Service for more information (800) 621-2802
Edges	Attachable beveled edges are available
Usage Intensity	Heavy duty
Accessory Sizes	30 inch x 36 inch; 30 inch x 48 inch; 30 inch x 60 inch; 30 inch x 72 inch; 30 inch x 96 inch; 42 inch x 72 inch; 42 inch x 96 inch; 42 inch x 120 inch
Installation	The modular matting system consists of 12in x 12in modular tiles that interlock for on site installation with a rubber hammer.
Material Specifications	PVC (DOP free)
Surface Detail	Industrial Diamond Plate
Mat Type	Runner
Process	Injection Molding
Weight Lbs/sqft	2.1

Performance Features	Oil Resistant, Chemical Resistant
REACH Compliant	Reach compliant (Registration, Evaluation, Authorization and Restriction of Chemicals).
Anti-Fatigue Rating	Superior
Slip Resistance Rating	Superior
Wear Resistance Rating	Superior

Prop 65

⚠️WARNING: This product can expose you to chemicals including di-2-ethylhexyl phthalate and/or diisononyl phthalate which is known to the State of California to cause cancer, birth defects or reproductive harm. For more information, visit www.P65Warnings.ca.gov.

Product Options

Color:	Black
	Black/Yellow
Dimensions:	2.5ft x 3ft
	2.5ft x 4ft
	2.5ft x 5ft
	2.5ft x 6ft
	2.5ft x 8ft
	3.5ft x 10ft
	3.5ft x 6ft
	3.5ft x 8ft